

Summary - TimeIQ to IQstream

Name	timeiq_to_iqstream
Worker Type	Application
Version	1.5
Release Date	4/2019
Component Library	ocpi.assets.misc_comps
Workers	timeiq_to_iqstream.hdl
Tested Platforms	isim, xsim, modelsim, zed, matchstiq_z1, e3xx, alst4, ml605

Functionality

The TimeIQ to IQstream component adapts the TimeStamped_IQ protocol to the iqstream protocol.


Worker Implementation Details

timeiq_to_iqstream.hdl

The TimeStamped_IQ protocol consists of multiple opcodes which include complex IQ samples, and the iqstream protocol consists only of complex IQ samples. The timeiq_to_iqstream worker inspects the opcode of the input port and only forwards data with the `samples` opcode.

Block Diagrams

Top level

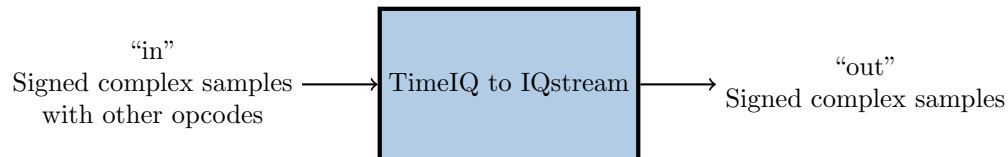

Source Dependencies

timeiq_to_iqstream.hdl

- bsp_picoflexor/components/timeiq_to_iqstream.hdl/timeiq_to_iqstream.vhd

Component Spec Properties

There are no component spec properties for this component

Worker Properties

There are no worker implementation-specific properties for this component

Component Ports

Name	Producer	Protocol	Optional	Advanced	Usage
in	false	TimeStamped_IQ-prot	false	-	Signed complex samples plus other operations
out	true	iqstream_protocol	false	-	Signed complex samples

Worker Interfaces

timeiq_to_iqstream.hdl

Type	Name	DataWidth	Advanced	Usage
StreamInterface	in	32	-	Signed complex samples plus other operations
StreamInterface	out	32	-	Signed complex samples

Control Timing and Signals

The `timeiq_to_iqstreamworker` uses the clock from the Control Plane and standard Control Plane signals.

Worker Configuration Parameters

timeiq_to_iqstream.hdl

Table 1: Table of Worker Configurations for worker: timeiq_to_iqstream

Configuration
0

Performance and Resource Utilization

Table 2: Resource Utilization Table for worker "timeiq_to_iqstream"

Configuration	OCPI Target	Tool	Version	Device	Registers (Typ)	LUTs (Typ)	Fmax (MHz) (Typ)	Memory/Special Functions
0	stratix4	Quartus	17.1.0	N/A	257	171	N/A	N/A
0	zynq	Vivado	2017.1	xc7z020clg400-3	257	255	N/A	N/A
0	zynq-ise	ISE	14.7	7z010clg400-3	248	407	398.756	N/A
0	virtex6	ISE	14.7	6vcx75tff484-2	248	407	315.751	N/A

Test and Verification

The input file contains message metadata and uses three different opcodes from the TimeStamped_IQ protocol, and is formatted in the following manner:

1. 8 byte **time** operation
2. 8 byte **interval** operation
3. 2880 byte **samples** operation
4. 8 byte **time** operation
5. 2880 byte **samples** operation

The data in the samples operation is a ramp from 0 to 2087.

The expected output waveform is the identical ramp with all other operations removed. For verification, the output file is compared to a golden input file.